

HERTZ EFB – START/STOP MULTISTART

Numer katalogowy	Obudowa	Pojemność [Ah]	Układ ogniw	Rozruch [A] wg EN	WYMIARY		
					dł	szer	wys
6015-EFI	LB2	60Ah	P+	560	242	175	175
6516-EFI	L2	62Ah	P+	600	242	175	190
7215-EFI	LB3	72Ah	P+	720	278	175	175
7516-EFI	L3	75Ah	P+	750	278	175	190
8215-EFI	LB4	82Ah	P+	780	315	175	175
8516-EFI	L4	85Ah	P+	800	315	175	190
9515-EFI	LB5	95Ah	P+	850	353	175	175
10016-EFI	L5	100Ah	P+	900	353	175	190